


Installation GUIDE


Optional Collar System

WHOLE HOUSE HEPA FILTRATION SYSTEMS

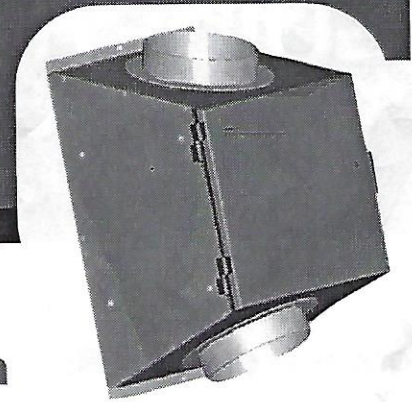

Kit Content

- (2) 8 inch round plastic duct adapters
- (2) Metal mounting brackets
- (6) No. 10 x 1" Wood Screws

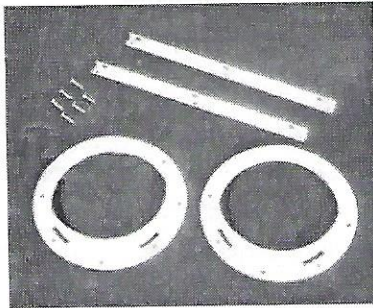

Tools and Material Required

- Metal Shears
- Phillips #2 or Robertson #1 screwdriver
- Duct tape
- Duct adapters to be mounted using screws supplied with your HEPA filtration unit. (16) 8 x 32 x 1/2"

Ducted Installation

The following instructions permit the easy conversion of the HEPA Filtration System for use with a ducted installation. Refer to the HEPA Filtration unit's guide for help on different application of the ducted system.

Step by Step Installation

- Step 1** - Use metal cutting shears to cut all the tabs around the top and bottom circle as illustrated below (fig 1). If necessary, remove decal to help follow the precut lines on the cabinet.
- Step 2** - Cutout the insulation with a utility knife using the metal ridge as a guide.
- Step 3** - Install 8" plastic port collars using the plenum mounting hardware provided in the HEPA Filtration System's kit. (16) 8 x 32 x 1/2" (fig. 2)
- Step 4** - Remove the 3 side cabinet screws and install the mounting bracket.
- Step 5** - Using the (6) No. 10 x 1" wood Screws provided in kit, mount the unit in the location that best suites the application.
- Step 6** - Connect to ductwork to finalize installation using duct tape to seal off all the joints. (fig .3)

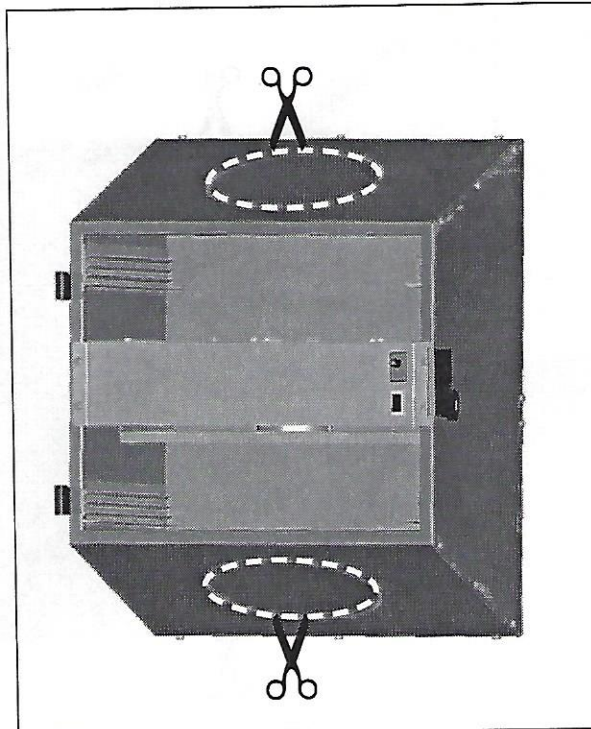


figure 1

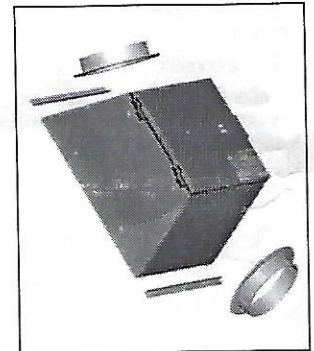


figure 2

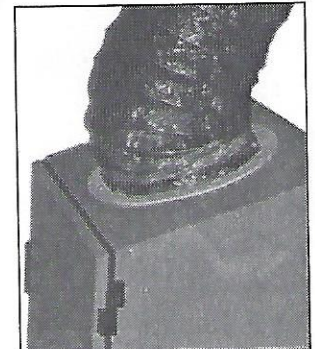


figure 3